

IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.


When using electrical equipment, basic safety precautions should always be followed including the following:

- **DISCONNECT AC POWER SUPPLY BEFORE SERVICING.**
- Installation and servicing of this equipment should be performed by qualified service personnel only.
- Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable.
- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Any modification or use of non-original components will void the warranty and product liability.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS!

The CP10Q Recessed Canopy light is designed to be recessed mounted in ceilings or enclosed canopies. Please consult your lighting designer for installation guidance. Ensure that your opening is no larger than 12" x 12" no smaller than 9" x 9" and at least 5' deep.

1. Open the wireway cover by loosening the (2) screws. Feed supply wires through prepunched knockout and rubber grommet.

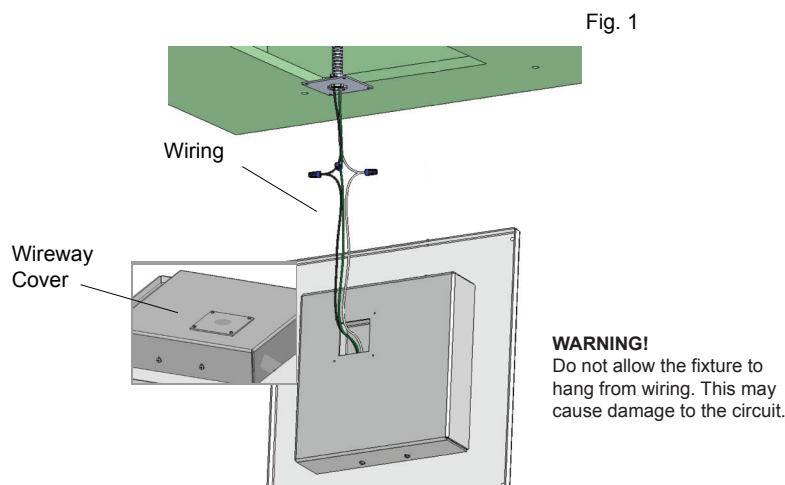


2. Electrical connections should be made inside the wireway cover.


Black - Line
White - Neutral
Green - Ground

Note: This fixture auto adjusts for voltages between 120VAC - 277VAC. Cap all unused leads to prevent shorting.

3. To secure the wireway cover, retighten the (2) screws. Make sure no wires are being pinched during this process and the gasket is set. (Fig. 2)

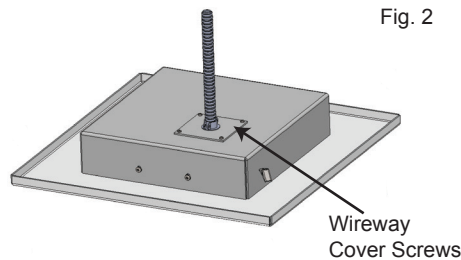

4. Align the fixture's trim plate to the opening and secure using appropriate anchors and hardware. (supplied by others) (Fig. 3)

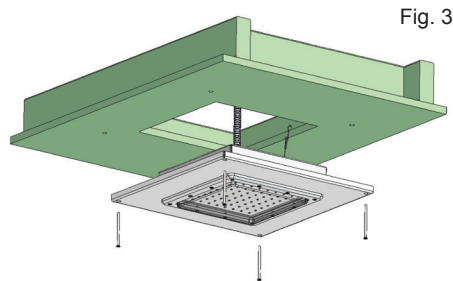

IMPORTANT

For outdoor weatherproof installation: Apply sealant across top edge of canopy to prevent water from reaching the back of the enclosure.

OPERATION

The CP10Q requires no special handling, power ON or power cycle requirements. Routine inspections are recommended to visually verify the fixture is ON and emitting light. Refer to the troubleshooting guide for any unit not functioning correctly.

TROUBLESHOOTING

If the CP10Q does not turn ON:

1. Check incoming voltage to the LED driver. Must be at least a minimum of 120VAC and not to exceed 277VAC.
2. If all LEDs on the engine are OFF, LED driver may be disconnected. Ensure driver(s) are secure. If secure, use voltmeter to check voltage is present at the output of the power supply. If low or no voltage, consult factory.
3. If some, but not all LEDs are working consult factory for additional technical support. Please have the catalog number and photos available when contacting technical support.